 
 
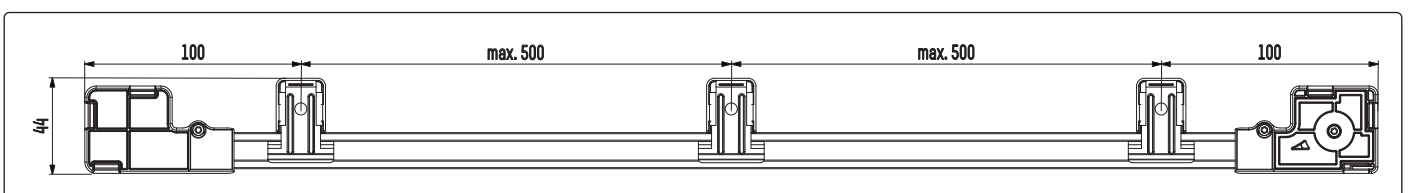 
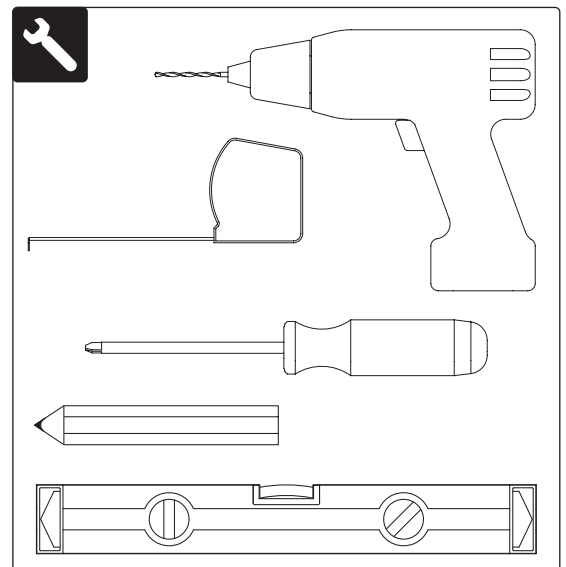 
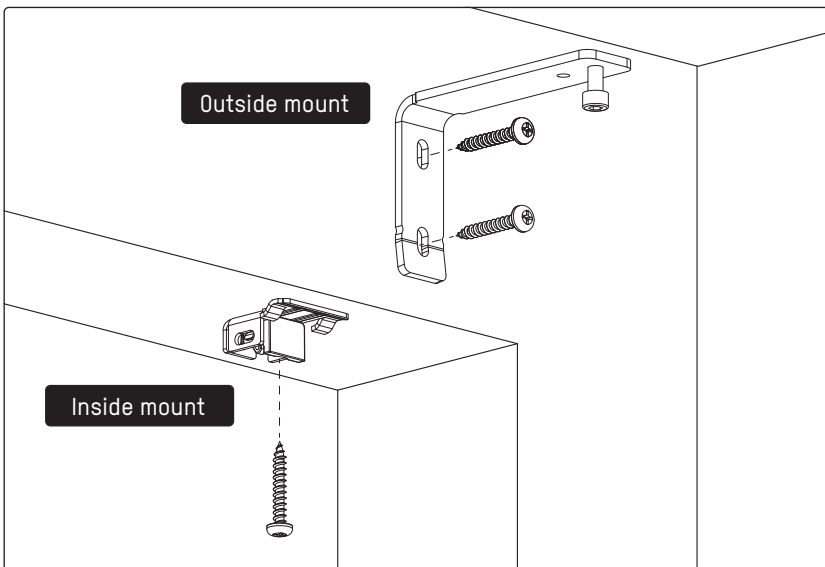 
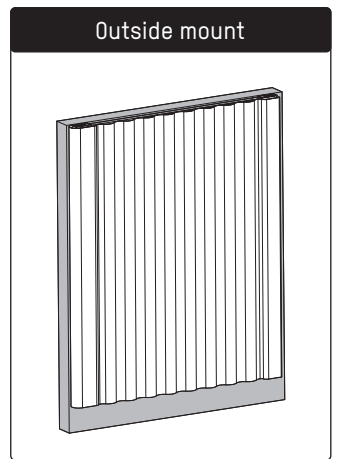 
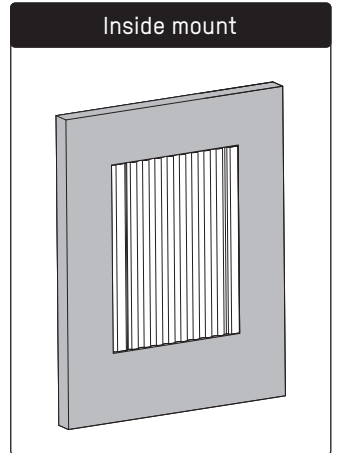 
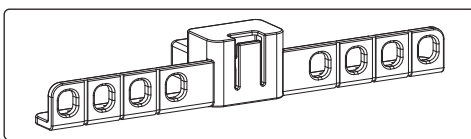 
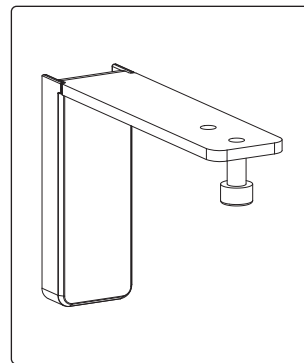 
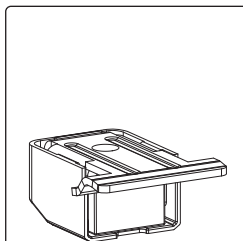 
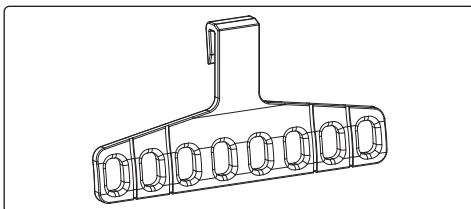 







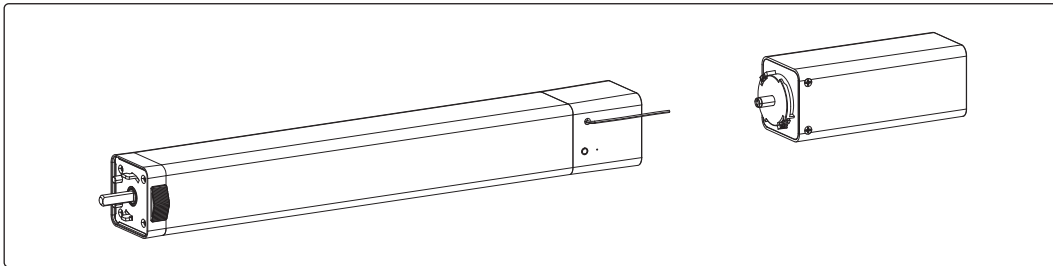


Read the instructions carefully before assembling and using the product.
Assembling process can be completed by non-professionals.
For indoor use only. This product does not require maintenance.






CC-B120, CM-36

    
 
 
Wave, single

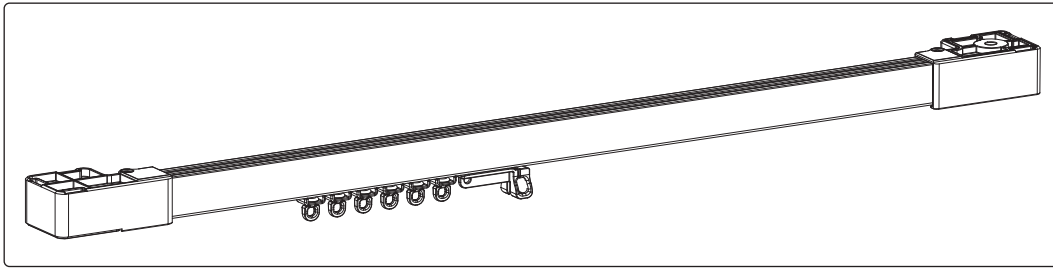

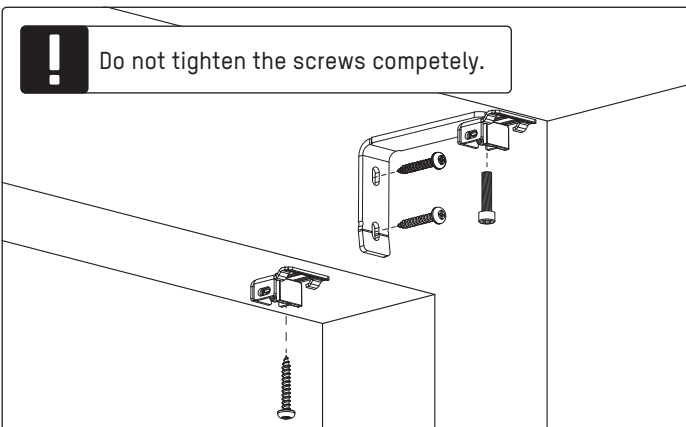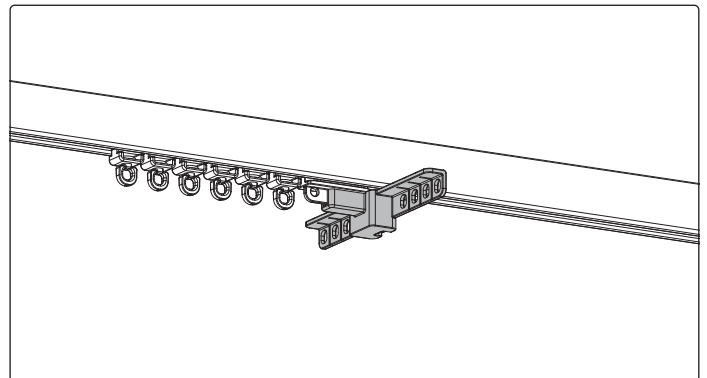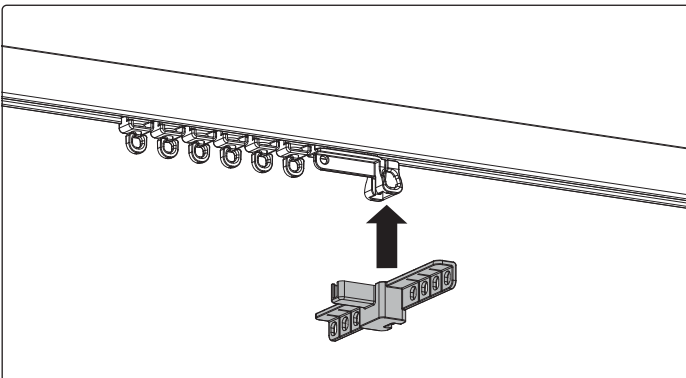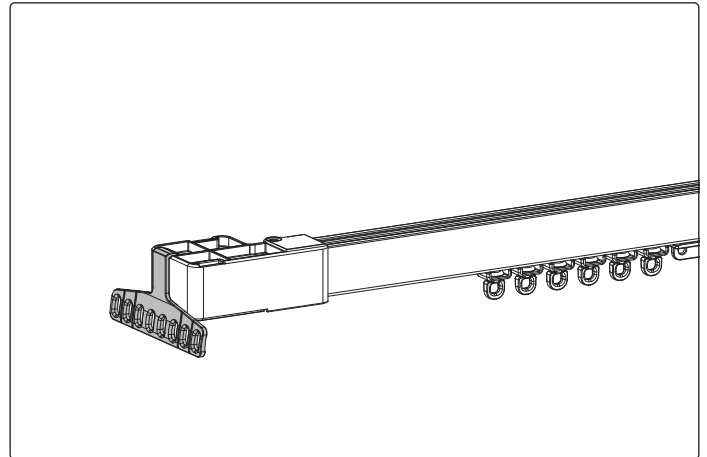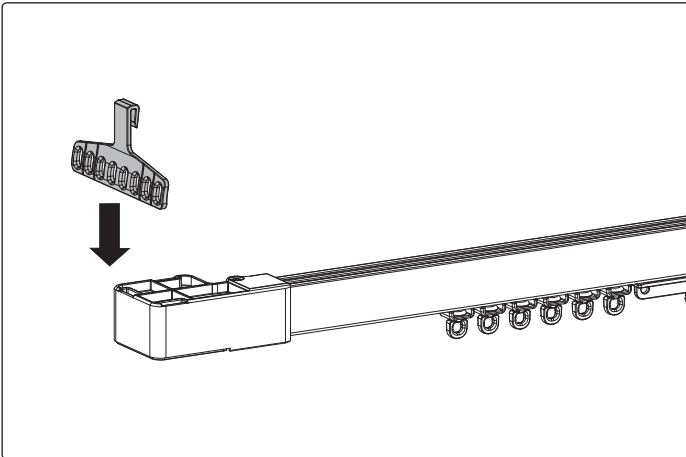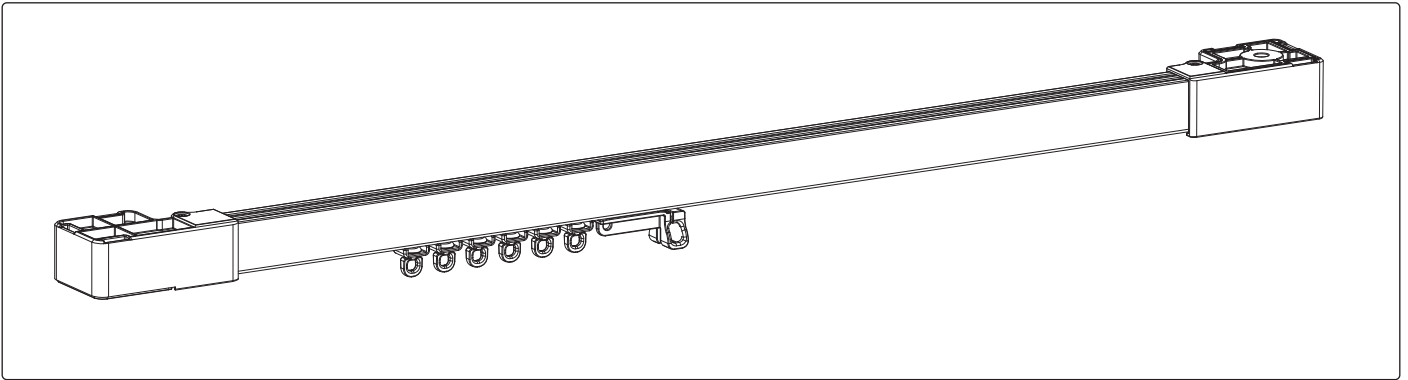


Do not tighten the screws completely.

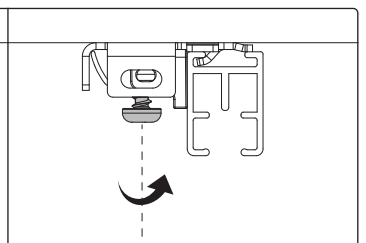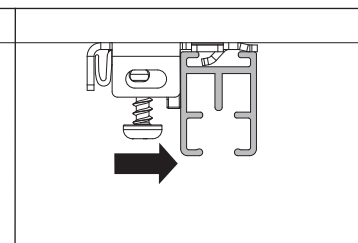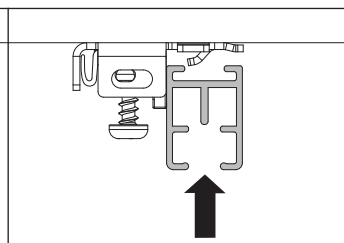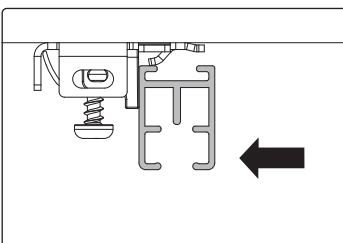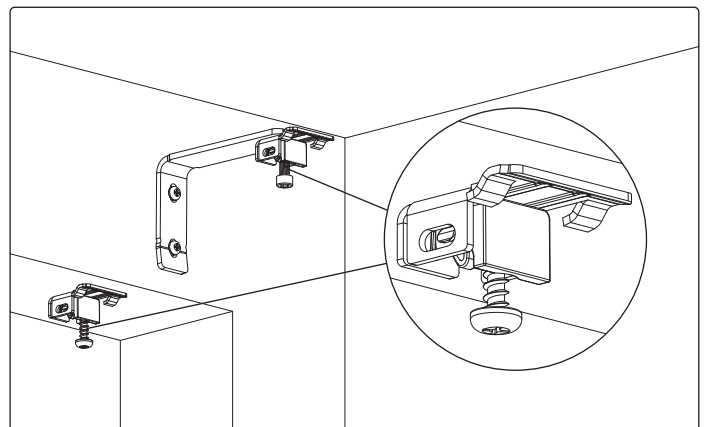     


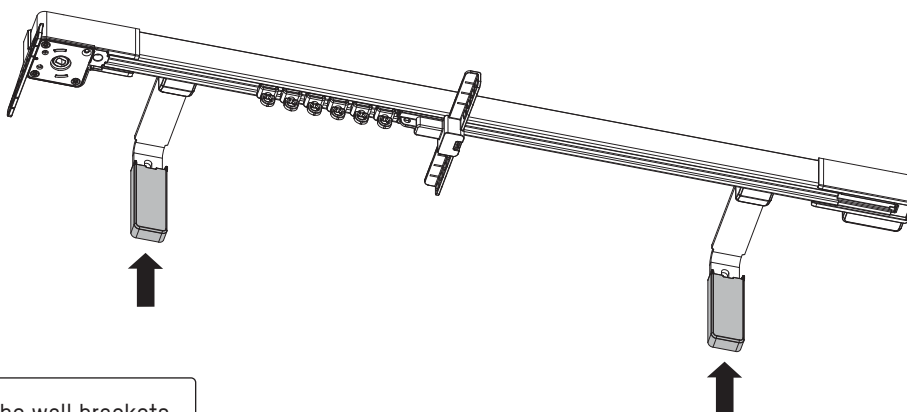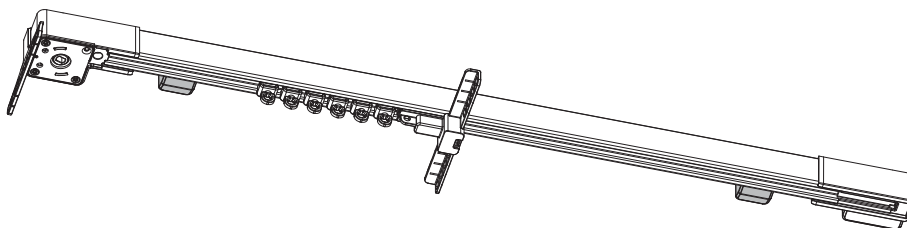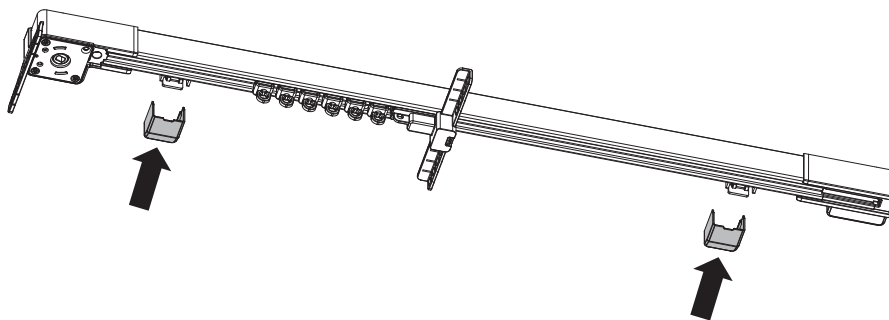   


i Only if using the wall brackets.

  i Attach the curtain to the carriers.



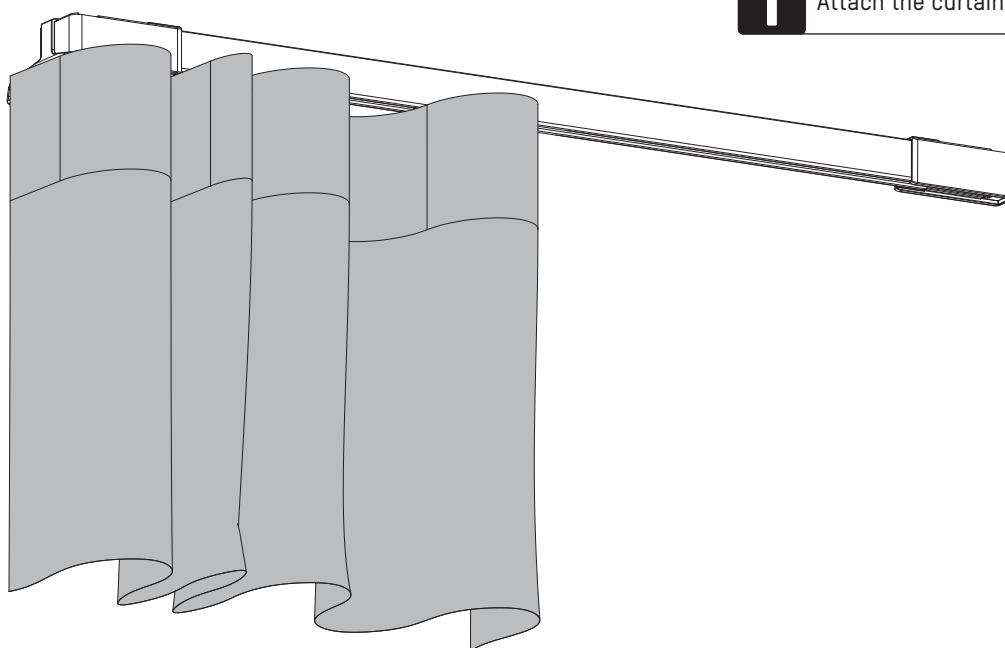


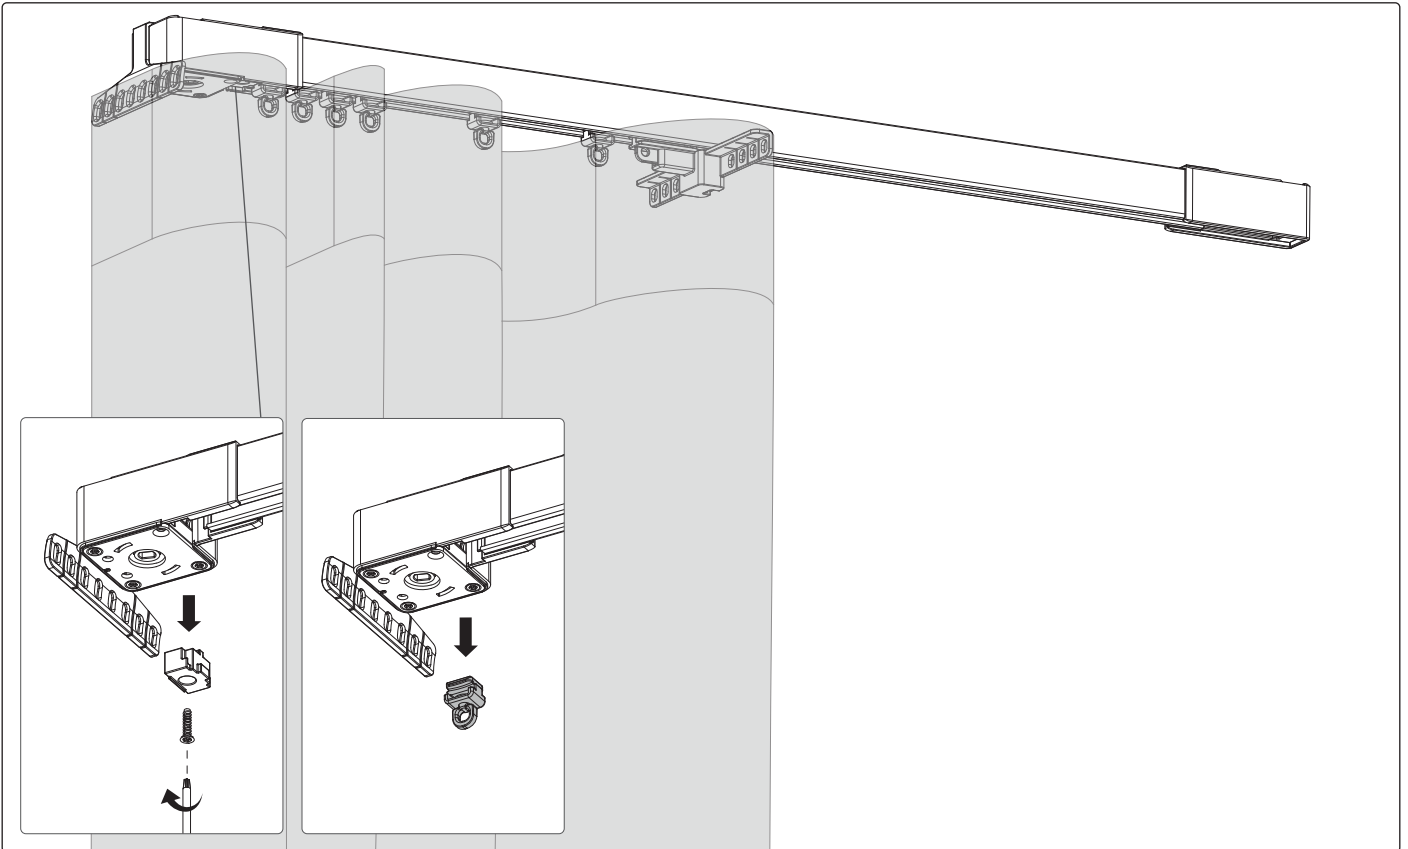

i It is possible to remove runners.

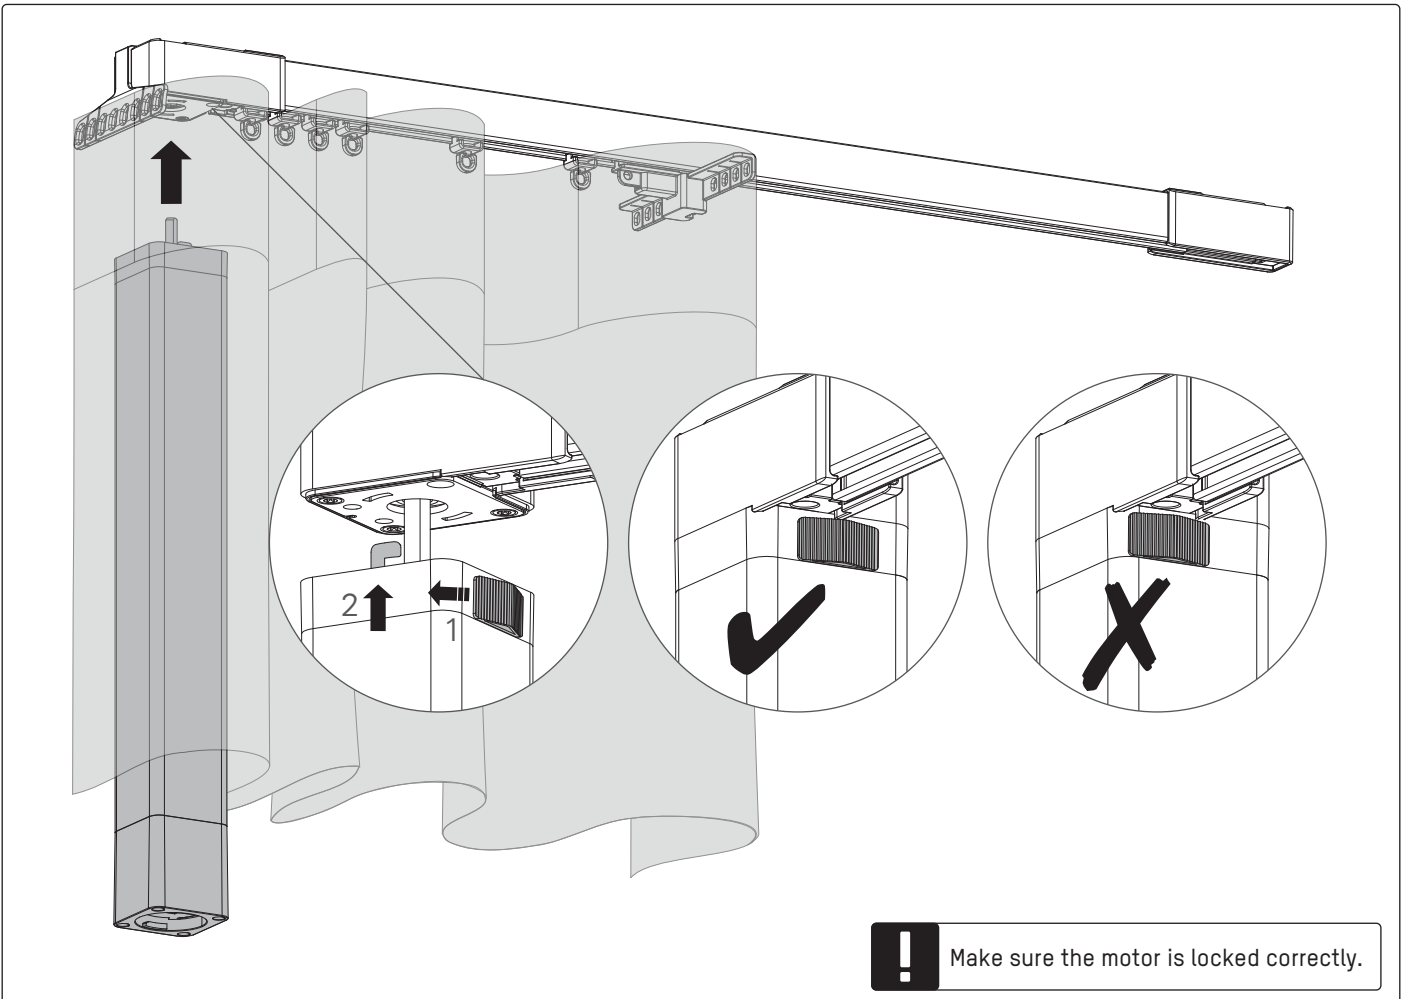 

   ! Make sure the motor is locked correctly.

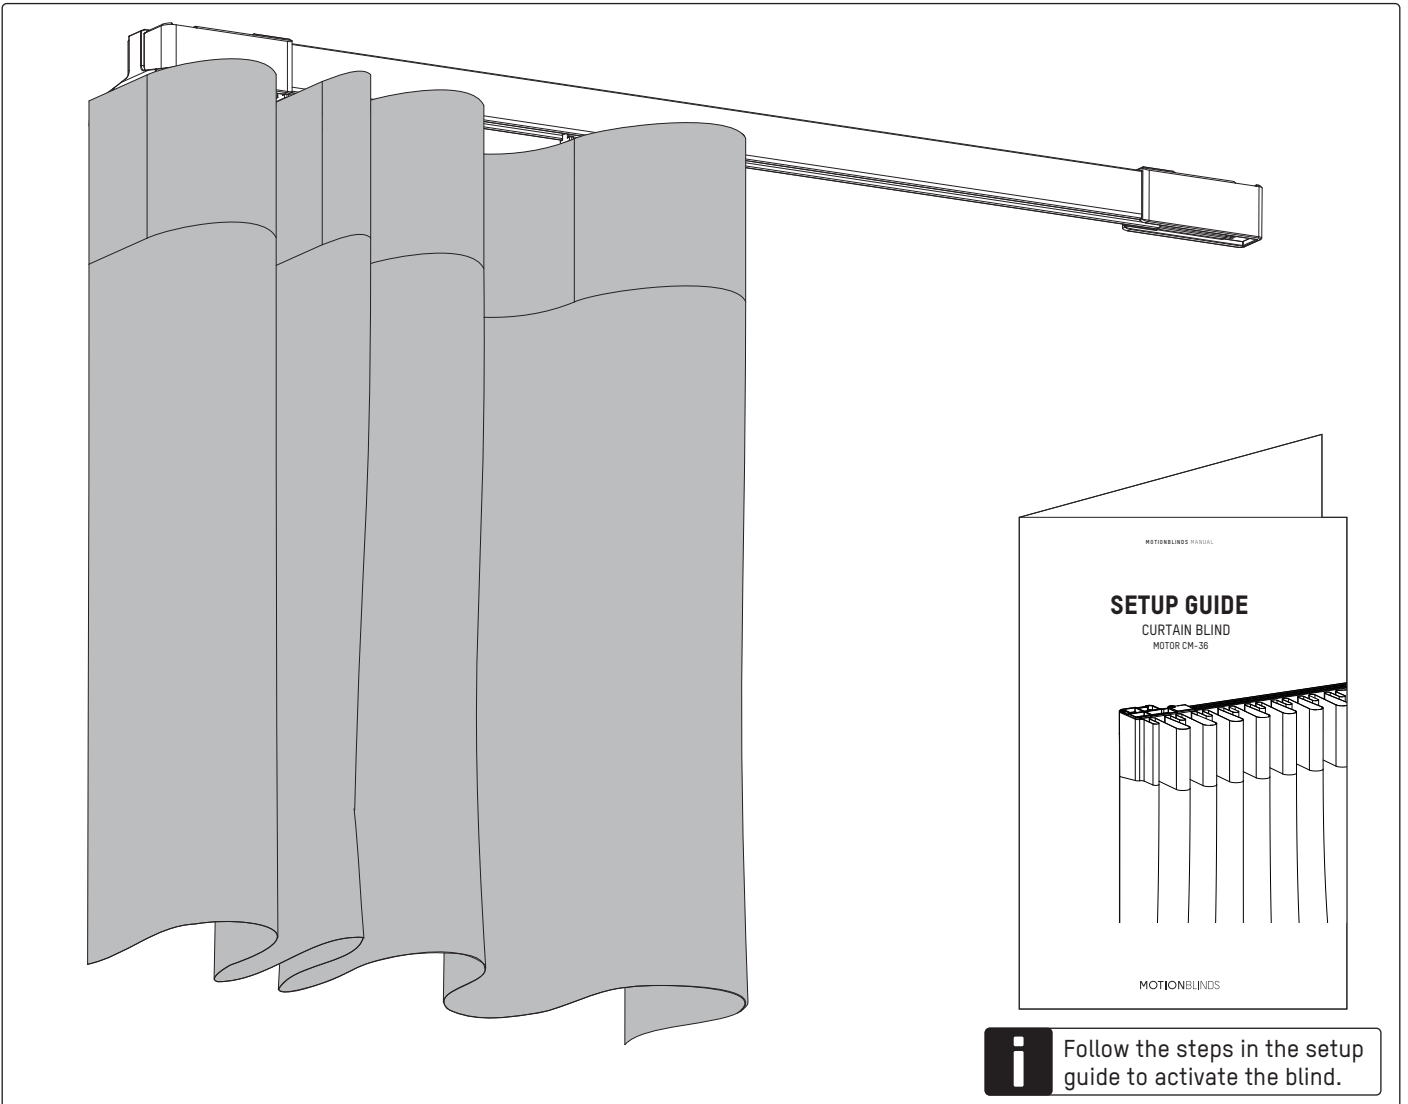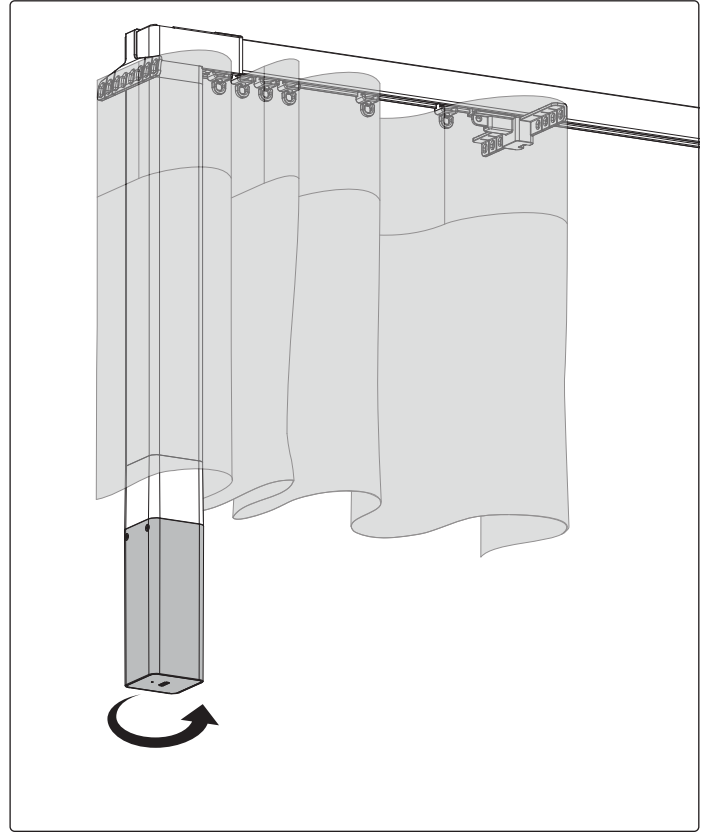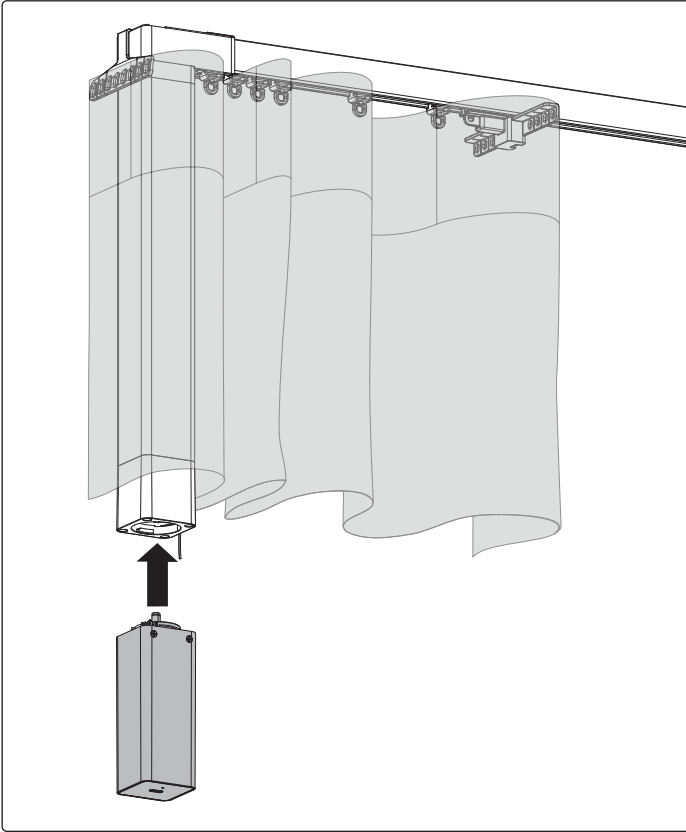

i Follow the steps in the setup guide to activate the blind.